


INSPECTIONS (cont).

Filter Tubes

1. Frequent checks of filter tube wear and deterioration should be made. Worn or damaged filter tubes should be replaced. Be sure filter tubes are taut at all times or cleaning of the filter tubes will be affected.
2. A manometer reading across the filters that reads higher than a predetermined level after normal shaking indicates that the filter tubes may be blinded and should be either cleaned or replaced. (Also see trouble shooting chart).

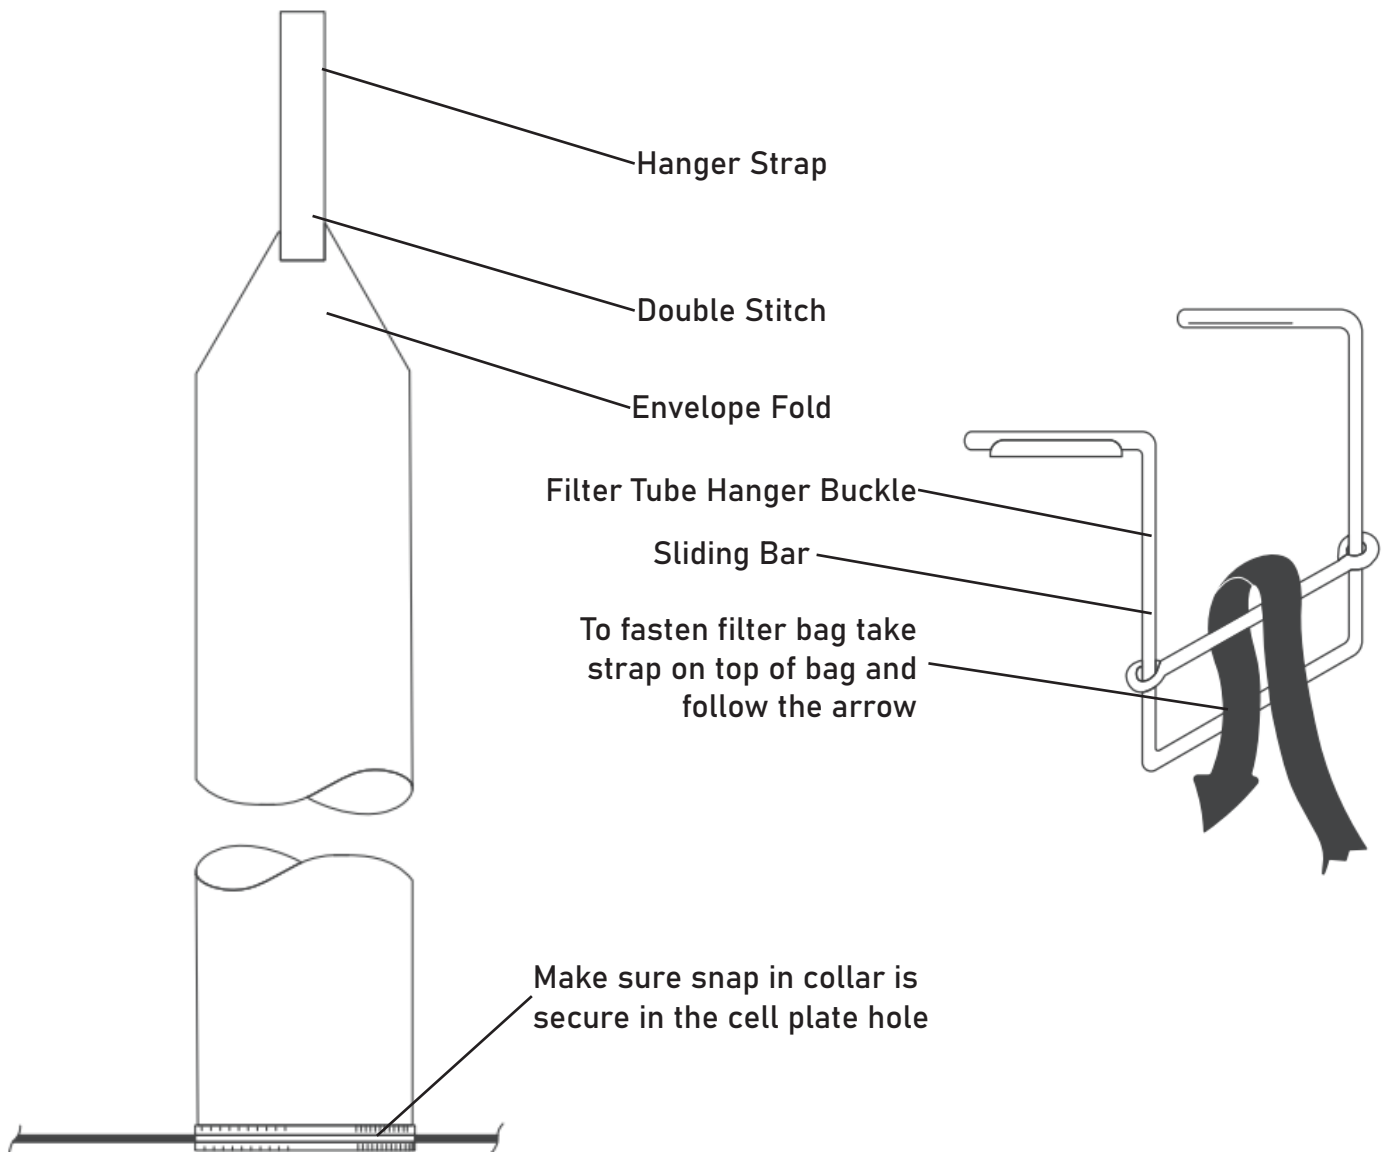

INSPECTIONS (cont).

Collapse the bottom snap collar into a “U” shape. Grasp collar at bottom of tube, folding together the two sides.



Insert folded tube into cell plate opening.



INSPECTIONS (cont).

Collar will snap open when guided into position, making a tight seal.



Please note, it is imperative the snap collars are securely fitted into the collar plate. The snap collars are designed with a indented ridge that will allow the filter to form a perfect seal. Filter collars not installed correctly will result in compromise of filtration, and the process may have to be restarted.

